



# Canon EOS Rebel XSi Front Panel Replacement

Remove and replace the back panel on your camera

Written By: Erik Mork



## INTRODUCTION

This replacement guide shows how to remove the device's front panel. This is necessary to access internal components that are located in the front.

## Step 1 — Back Panel



- Squeeze the eyepiece between your index finger and thumb and lift up and off

## Step 2



- Using the PH000 screwdriver head, remove the four 4 mm screws on the bottom of the camera

## Step 3



- On the right side of the camera (from the LCD screen), use the PH000 screwdriver head to remove the two 3mm screws


## Step 4



- Remove grip by slowly peeling off



## Step 5

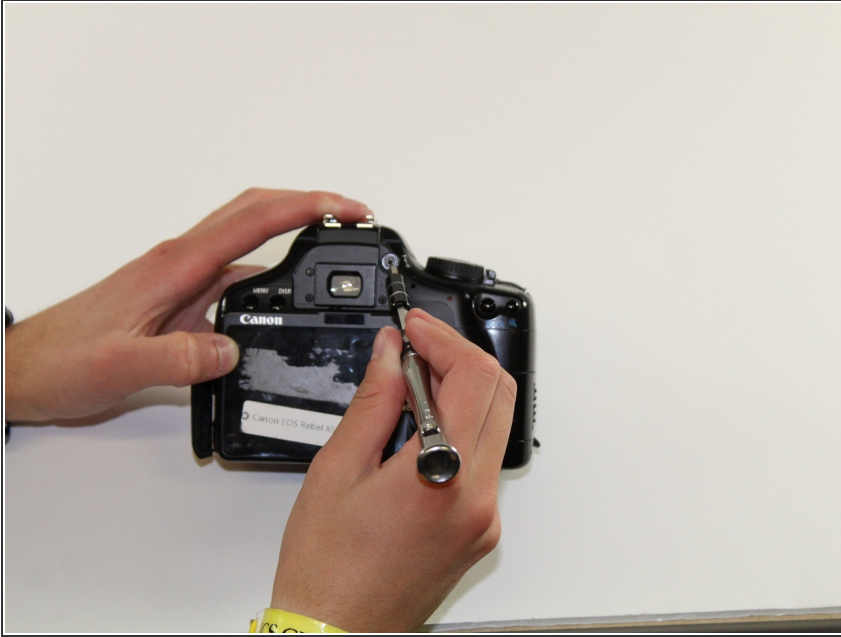

- Using the PH000 screwdriver, remove the four 4mm screws behind the eyepiece

## Step 6




- On the left side of the camera (from the LCD screen), use the PH000 screwdriver head to remove one 4 mm screw

## Step 7



- Remove side panel by lifting off with fingers

## Step 8

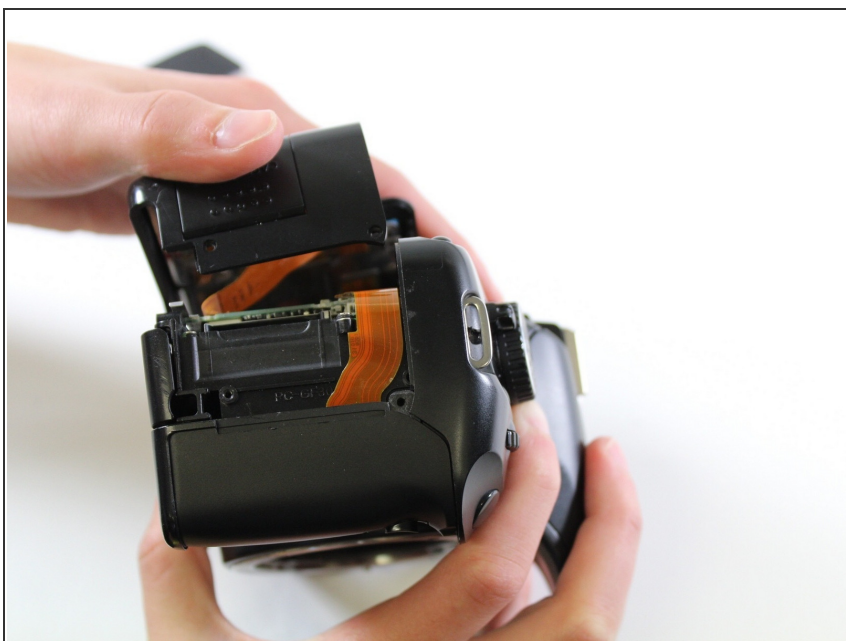

- Use hands to pry off the back panel

## Step 9 — Front Panel



- Using the PH000 screwdriver head, remove the four 3mm screws on the front

## Step 10



- Remove front grip by gently peeling from the edge towards the center of the camera




## Step 11



- Using the PH000 screwdriver head, unscrew the 3 mm screw that was under the grip



## Step 12

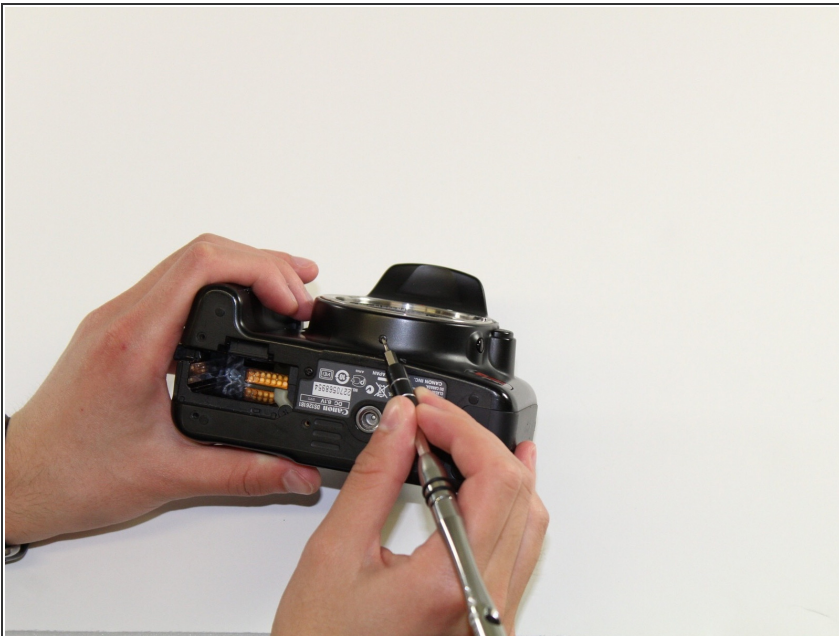

- Using the PH000 screwdriver, remove the 4mm screw at the bottom of the camera



## Step 13

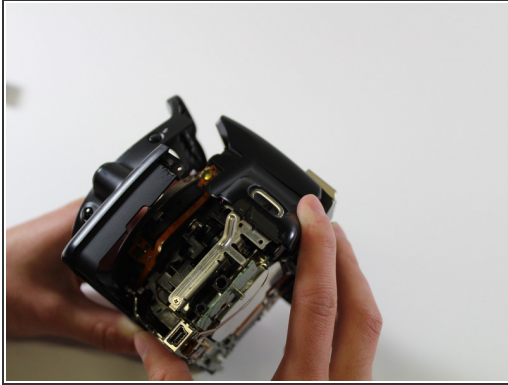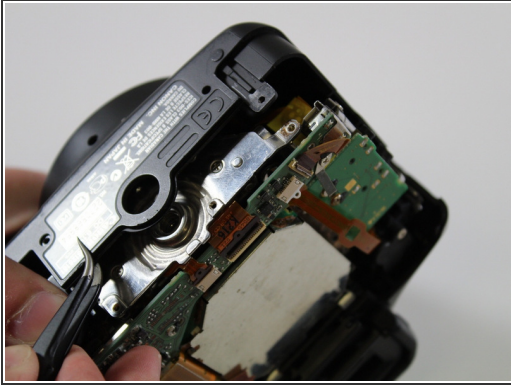

- Remove the front panel by using tweezers to pry the panel over the metal ring protrusion

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:08:35 AM.